
Power windows*

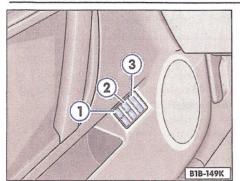

The switches are located in the driver's door. Also, the front passenger's door has its own power window switch.

Following switches are located in the driver's door (see illustration):

- 1 Rear windows
- 2 Front windows
- 3 All windows

32

The switches **2** for the front windows on the driver's door are "dual function" switches.

If the respective switch is pushed or pulled to the **first detent**, the front window will open or close only as long as you push / pull the switch

If the respective switch is pushed up or down all the way briefly, the window will open or close automatically (onetouch up feature, one-touch down feature).

To open or close all windows at the same time pull or push switch number **3**.

Note:

Whenever you unlock the vehicle the front windows will lower approximately 1 inch (20 mm) to protect the convertible top when opening the doors (see pages 23 and 26).

When you close the doors, the windows will go up again.

Remember to keep your fingers away from the window when you close the door. The pinch protection is off and the closing window could cause personal injury.

All windows are equipped with **pinch protection**.

This means that if something should block the window while it is closing, it will stop automatically and then immediately open again.

Please note that when closing the windows from the outside, using the key, the function of the "Pinch protection" is switched off. The window will close regardless of any obstacles.

WARNING

Be careful when closing the windows. Make sure no one is in the way, or serious injury could result.

MARNING

- Do not leave children unattended in the vehicle, especially with access to vehicle keys. Unsupervised use of the keys can result in starting of the engine and use of vehicle systems such as power windows, power roof, etc. which could result in serious injury.
- Remember also that the power windows will continue to operate until the ignition key has been removed and one of the doors has been opened.
- Be careful when closing the windows. Check to see that no one is in the way, or serious injury could result!
- Always remove the ignition key whenever you leave your vehicle.
- If you lock your vehicle from the outside, no one especially children should remain in the vehicle. The windows will not open in case of an emergency.
- Do not stick anything on the windows or the windshield that may interfere with the driver's vision.

Using power windows, ignition On

Opening

Switches in the driver's door

- Press switch down to first detent. The window will open as long as the switch is pressed down.
- Press switch down all the way briefly. The window will open automatically (one-touch down feature, front windows only). If you press the switch while the window is opening, the window will stop where it is.
- Press the all window switch to open all windows. All windows will open as long as the switch is pressed down.

Switch in the passenger's door

 Press switch down. The window will open as long as the switch is pressed.

Closing



WARNING

- Be careful when closing the windows.
- Check to see that no one is in the way, or serious injury could result.

Switches in the driver's door

- Pull switch up to first detent. The window will close as long as you pull the switch.
 - Pull switch up all the way briefly, (onetouch up feature, front windows only). The window will close automatically. If you press the switch while the window is opening, the window will stop where it is.
- Pull the all window switch to close all windows. All windows will open as long as the switch is pressed down.

Switch in the passenger door

- Pull switch up. The window will close as long as you push the switch.

"Pinch Protection"

- If something interferes with a power window while it is closing, it will stop and then immediately open again.
- 2 After the window has opened, you have to lift the switch within 10 seconds to try to close it again. The window will now move upwards with greater force. If the window is still prevented from closing, it will stay open.
- 3 If the window stays open, you have to lift the switch again within 5 seconds in order to close the window. The pinch protection is now switched off. The window will now close with maximum force.

Note

If you wait longer than 10 respectively 5 seconds between the steps described above, the window will open completely when you press the switch again.

Λ

WARNING

- Be careful when closing the windows while overriding the pinch protection!
- Check to see that no one is in the way, or serious injury could result.

Using power windows, ignition Off

You can still use the power windows for about 10 minutes after the ignition is switched off even if the ignition key has been removed as long as the driver's door or passenger's door are not opened.

The automatic closing feature (one-touchup) does not work once the ignition has been switched off. The window can only be closed as long as the switch is activated.

If the driver's or the front passenger's windows are hard to close because of stiffness or are obstructed by an object when closing (pinch protection) the window will open immediately.

In this case the window can be closed again only when the ignition is switched on.

The windows can also be closed or opened from the outside. To do this, the key must be held in the close or open position in the lock on the driver's door.

The window closes without pinch protection.

Notes

If the vehicle battery is disconnected and then reconnected, or, if the battery becomes completely discharged, the automatic closing and opening function will be deactivated and will no longer work

To reactivate this feature, do the following:

- Lock the vehicle via the driver's door.
 Make sure that both doors and windows are completely closed.
- Unlock the vehicle one more time.
- Turn the key to the lock position a second time and hold the key in the lock position for at least 1 second.

Automatic closing / opening is now reactivated.



WINDOW RESET

Convertible top

General notes

The convertible top is designed for quick and easy operation.

Under normal conditions the convertible top is windproof and waterproof. In extremely bad weather (such as torrential or continuous rain), a few drops of water could possibly get inside the vehicle, However this is normal and no cause of concern.

To retain the attractive appearance of the convertible top and keep it waterproof, please follow the instructions for cleaning and care in **Booklet 3.2.** You should also be aware of the following points:

- Always clean the convertible top when it gets dirty. Remove any bird droppings or other residue as quickly as possible.
- If you are going to let the vehicle stand outside for a long time without being driven, we recommend you place a cover over the roof for protection. This is especially important if you are going to park the vehicle under a tree.
- Do not leave your vehicle standing for long periods of time in direct sunlight. The intense sunrays could bleach out the convertible top material.

- Only open the convertible top when it is clean. Otherwise particles of grit can scratch the rear window when the convertible top is folded down and damage the fabric over a period of time. It is also important to remove ice and snow before opening the convertible top.
- Do not use a sharp object or anything that could scratch the fabric to remove ice and snow. However, a normal ice scraper can be used to clear the rear window.
- The convertible top should only be opened when it is completely dry. If it is opened and folded when damp, this can cause unsightly marks or mildew if left down for a long time.
- Do not leave the convertible top open for long periods (more than one week or two); it is best to close it occasionally to prevent any discoloration in the folds of the fabric and to allow the creases to smooth out. This is especially important if the top has been opened at any time while still damp.
- If you are going to park and leave your vehicle, you should always close the convertible top. This way the interior will stay clean and you do not have to worry about theft.

- Close the convertible top immediately when the weather conditions become unfavorable. This will help prevent damage to the vehicle interior. Likewise, do not open the convertible top when the weather conditions are unfavorable.
- It is advisable to avoid opening and closing the convertible top at temperatures below 32°F (0°C), because the fabric is less flexible at low temperatures.
- Do not place any articles or objects on the shelf behind the rear seat. When you open the convertible top, these articles could damage the convertible top itself or the rear window defroster wires.
- Before you open or close the power convertible top, make sure there is enough clearance, for example if the vehicle is parked under a carport or in your garage. If there is insufficient clearance, the roof could be damaged.

MARNING

- For safety reasons, never attempt to open or close the convertible top when the vehicle is moving.
- Never drive the vehicle if the convertible top is not properly secure, otherwise it could come open in the airstream. This could cause an accident resulting in personal injury or damage to the vehicle.


WARNING continued

- Always make sure that the convertible top is properly latched before driving off.
- Do not open or close the convertible top if the Rollover Support System® has been deployed.
- Do not open or close the convertible top whenever the vehicle is on a workshop lift or if you have the vehicle raised using the vehicle jack.
- When opening and closing the convertible top, make sure there is no risk of injury from the moving parts of the frame, etc.

The mechanism at both sides of the convertible top can cause injury when the top opens or closes.

- Never touch the mechanism when the convertible top is moving.
- Always make sure no one is in the way when the convertible top is moving.

Power convertible top

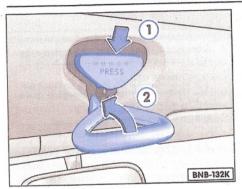


Opening the power convertible top

- Apply the parking brake firmly.
- Switch on the ignition.
- Press the release button (arrow 1) and pull the locking handle down. Do not pull the release button (1) otherwise you will damage it.
- Turn the handle counter-clockwise (arrow 2) until it stops and hold the handle in this position.

- Push the convertible top up using the handle and slightly open the convertible top. A yellow indicator light will come on in the temperature display above the inside rear view mirror. The indicator light will stay on while the top is being opened (see page 47).
- After you have lifted the convertible top slightly, turn the handle clockwise and fold it back into its recess.

Notes:

- When opening the power convertible top, the windows will automatically lower a little bit.
- The power convertible top can also be closed manually in case of a malfunction, see page 41. Take the vehicle to an authorized VOLKSWAGEN dealer in order to correct the malfunction.

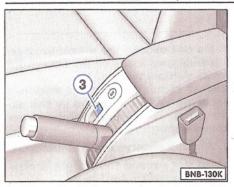

Lift and hold the control switch (3) while the power convertible top is opening. A chime will sound when the convertible top is completely open (down). When you hear the chime, you can release the switch.

Notes:

- The opening process will stop if you release the switch.
- The power convertible top roof is protected by a circuit breaker. If you are not able to close the roof after it is opened, or open the roof after it has been closed, wait about 5 minutes for the circuit breaker to reset itself automatically. If the circuit breaker is not malfunctioning, check the battery charge.

If the malfunction still cannot be determined, have the system inspected by your authorized Volkswagen dealer. If necessary, close the convertible power manually - see page 41.

Side trim panels on both sides of the rear seat

When you turn the handle to release the convertible top, the side trim panel on both sides of the rear seat will lift and open. Once the convertible top is open (down), the trim panels will retract.

WARNING

Be careful not to interfere with the side trim panels when they are opening and closing, otherwise serious personal injury or damage to the vehicle could result.

THESE ARE A
COMMON PROBLEM S
WERE DELETED
AFTER OL



Closing the power convertible top

- Switch on the ignition.
- Press down and hold the control switch (see illustration on page 39) until the power convertible top closes completely. The yellow indicator light will come on in the temperature display located above the rear view mirror during the closing process (see page 47).
 - The indicator light in the temperature display will go out as soon as the power convertible top is properly latched.
- Fold down the the locking handle for the convertible top.
- Turn the handle counter-clockwise (arrow 3).
- Pull the convertible top down firmly and turn the handle clockwise (arrow 4).
- Fold the handle back into the recess.


Notes:

- A chime will sound when the power convertible top is completely closed (up). When you hear the chime, you can release the power convertible top switch.
- To avoid draining the battery, do not operate the power convertible top repeatedly with the engine switched off.
- When reconnecting the battery the power convertible top switch may be deactivated. Lift and lower the windows once using the "all window" switch to reactivate the power convertible top switch (see page 32). The doors must be closed.
- If the convertible top indicator light flashes while you are operating the convertible top switch, then there is a malfunction in the system. Take your vehicle to an authorized VOLKSWAGEN dealer and have the system inspected.

Λ

WARNING

When the power convertible top is being closed, the rear side trim panels lift and fold back. Be careful not to interfere with the side trim panels when they are opening and closing, otherwise serious personal injury or damage to the vehicle could result.

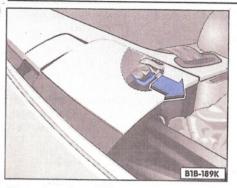


How to close the power convertible top if it is open (down) and there is a loss of power

If for any reason it is not possible to close the power convertible top by pressing the button in the center console (for instance if the battery is drained), do the following:


Unlocking the power roof mechanism

- Switch the ignition off.
- Set the parking brake firmly.
- To open the moving trim panels next to the side rear windows, carefully pull the ring located under the trim panel (see illustration above) until it is completely visible.
- Lift the side trim panel lid by hand.

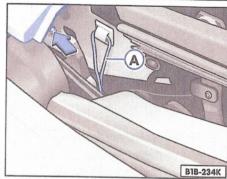

- Press the lower part of the flap in the direction of the arrow as indicated in the illustration above and hold the flap in this position The flap will move forward allowing you to have more space to grasp the red release cord.
- Remove the red cord (A) from its holder and pull it upward to release the power convertible top locking hook.
- Now repeat the last three steps on the other side of the vehicle.
- Open the rear lid.
- Pry off the round plastic cover, which protects the hydraulic pump screw on the left side of the luggage compartment.

RESET INFO!

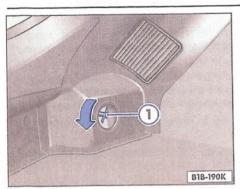

- Turn the screw (1) on the hydraulic pump counterclockwise until it stops (see arrow in illustration above).
- Swing the top forward using both hands, lift and push it forward.
- Lock the roof in place.
- Turn the screw (1) on the hydraulic pump clockwise until it stops and replace the round plastic cover.
- Close the rear lid.

What to do after you have closed the power convertible top

After you have manually closed the power convertible top, contact your authorized Volkswagen dealer as soon as possible to have the malfunction corrected.

If you try to activate the power convertible top electrically before having the malfunction corrected, you could damage the electrical or the hydraulic systems. Likewise, you could also damage the roof linkage or the power convertible top itself.


WARNING


When closing the convertible top, make sure there is no risk of injury from the moving parts of the frame, etc.



General notes

- If the convertible top is not properly latched on both sides when it is open, or if it is not properly closed, the convertible top system may not work correctly. Always make sure that the convertible top is securely latched on both sides when it is open as well as when it is closed.
- For your safety, once the manually operated convertible top is released either for opening or for closing, and the ignition is on, the all window switch in the driver's door panel will not work. It is possible to lower or raise the windows using the individual switches, but it will not be possible to raise them all the way up. Once the convertible top is securely latched, the switches in the driver's door panel will work again and it will be possible to raise the windows completely.
- In case of a malfunction in the manually operated convertible top, the all window switch will not work until the vehicle reaches a speed of about 3 mph (5 km/h), regardless if the top is latened or if it is not. Take your vehicle to an authorized VOLKSWAGEN dealer and have the system inspected immediately.

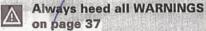

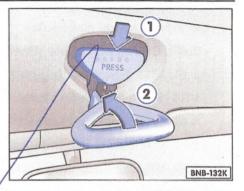

Opening the convertible top manually

The manual convertible top can be opened when the ignition is on or off.

- Apply the parking brake firmly.
- Press the release button (arrow 1) and pull the locking handle down. **Do not pull** the release button (1) otherwise you will damage it.
- Turn the handle counter-clockwise (arrow 2) until it stops and hold the handle in this position.
- Push the convertible top up using the handle and sightly open the convertible top. A yellow indicator light will come on in the temperature display above the inside rear view mirror (when the ignition is on). The indicator light will stay on while the top is being opened (see page 47).